

JMS-Cross Sections available in ALL modules

Use JMS-Cross sections to provide a better visualisation for your customers, planning officers or for the workshop.

--- Horizontal or vertical cross sections – You choose

1400

1200

70

275

70

715

70

70

left jamb/width 100 [✓] [✗]

580

70

880

70

Change the size of individual components – ie: jambs can now be different sizes.

Cut-out any part of the image to give a 3D visualisation of the construction.

View the window / item from any angle.

ZOOM IN and OUT will turn the annotations on/off.

Cross sections of any component or group of components are available.